

GEN 2.4 LOCATION INDICATORS

The location indicators marked with an asterisk (*) cannot be used in the address component of AFS messages.

1. ENCODE	
Location	Indicator
AIR OPERATIONS CENTRE (RSAF)	WSAH
BATAM/HANG NADIM (INDONESIA)	WIDD
JOHOR BAHRU	WMKJ
PAYA LEBAR	WSAP
SATCC (RSAF)	WSAR
SEMBAWANG	WSAG
SINGAPORE / SELETAR	WSSL
SINGAPORE / SINGAPORE CHANGI INTL	WSSS
SINGAPORE ACC/FIC	WSJC
TANJUNG BALAI KARIMUN/ RAJA HAJI ABDULLAH (INDONESIA)	WIDT
TANJUNGPINANG / RAJA HAJI FISABILILLAH (INDONESIA)	WIDN
TENGAH	WSAT

2. DECODE	
Indicator	Location
WIDD	BATAM/HANG NADIM (INDONESIA)
WIDN	TANJUNGPINANG / RAJA HAJI FISABILILLAH (INDONESIA)
WIDT	TANJUNG BALAI KARIMUN/ RAJA HAJI ABDULLAH (INDONESIA)
WMKJ	JOHOR BAHRU
WSAG	SEMBAWANG
WSAH	AIR OPERATIONS CENTRE (RSAF)
WSAP	PAYA LEBAR
WSAR	SATCC (RSAF)
WSAT	TENGAH
WSJC	SINGAPORE ACC/FIC
WSSL	SINGAPORE / SELETAR
WSSS	SINGAPORE / SINGAPORE CHANGI INTL

Intentionally Left Blank